



1

Make a hole as per the dimension mentioned below

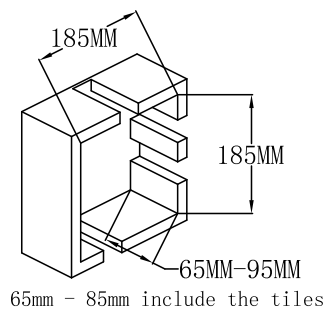


2

Connect the water inlet and outlet to the valve

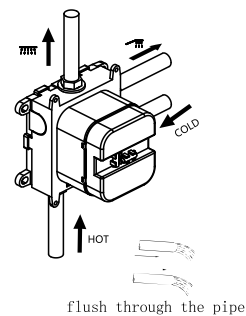


3

Make sure the switches of water inlet on the valve is remain open (default as open) Turn on the water below 4 bar water pressure and make sure no leaking at the connections

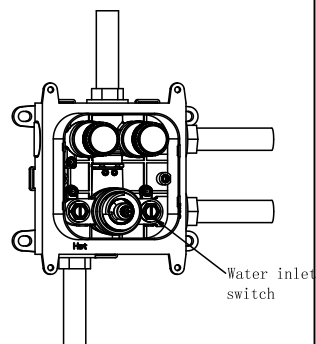

4

Turn the switch clockwise to close the water and no leaking at the connection

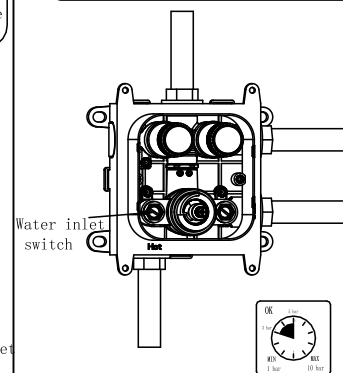

Remark : The recommended water pressure is 3 bar to 5 bar, and the working water pressure is 1 bar to 10 bar. Please do not install this thermostatic mixer when the water pressure had exceeded this range

