


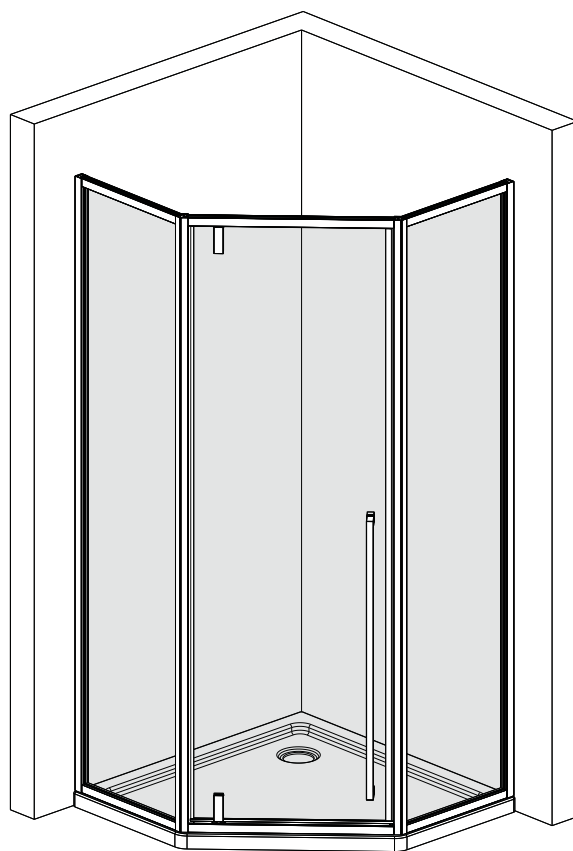
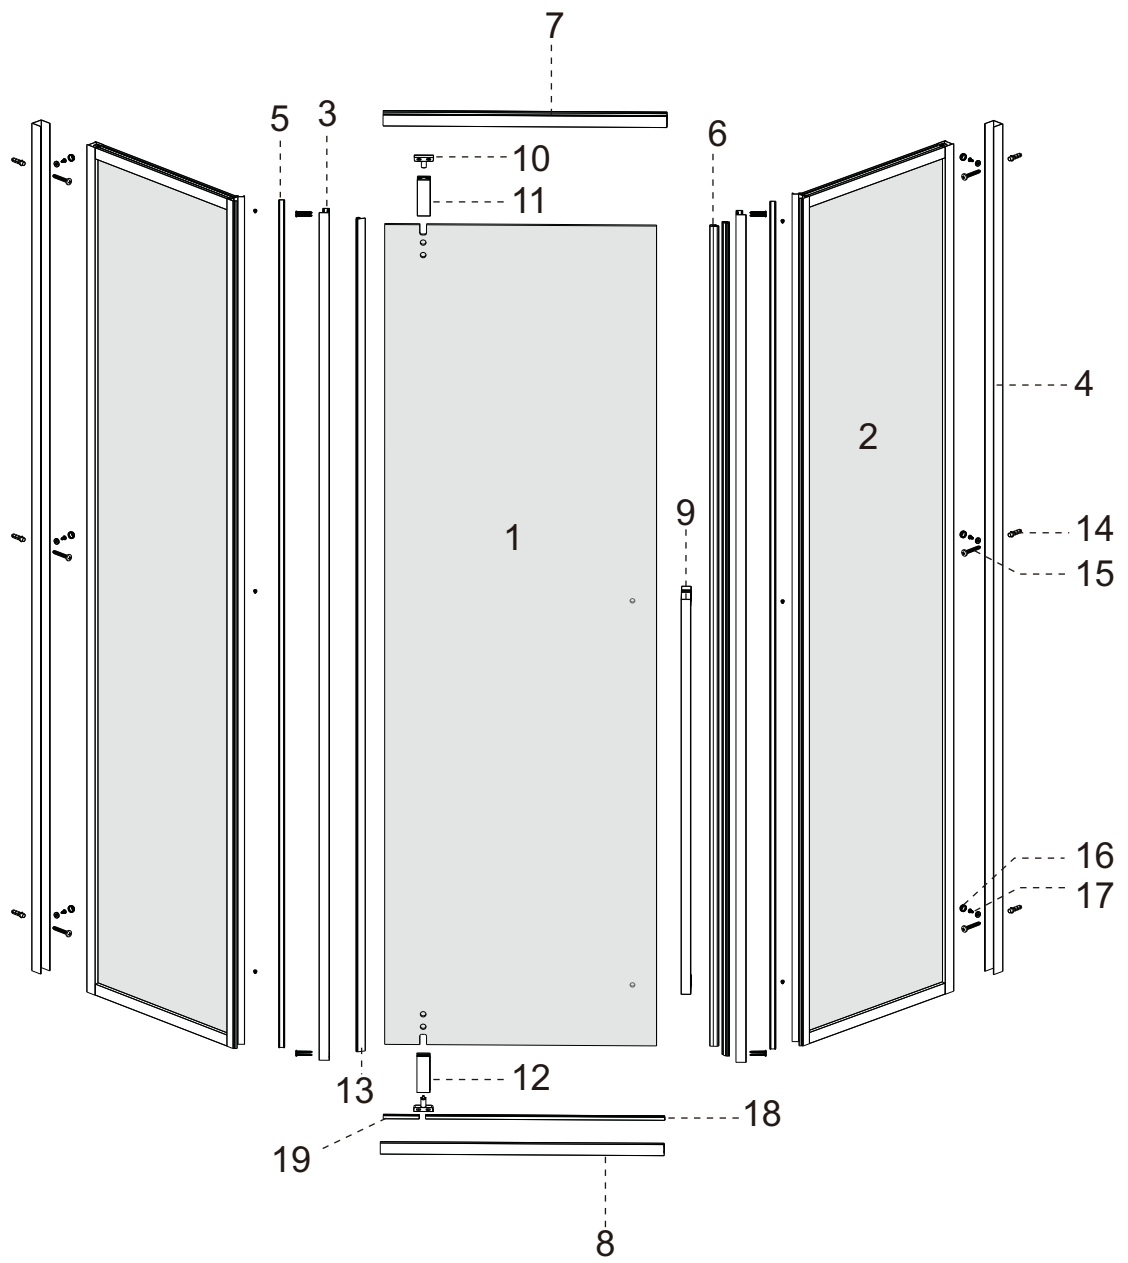
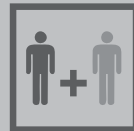


# Инструкция по установке VSP-3P900CL/VSP-3P900CLB

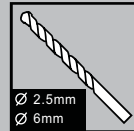

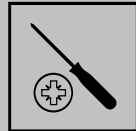

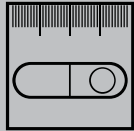

[1]




X1

[2]



X2

[3]



X2

[4]




X2

[5]




X2

[6]

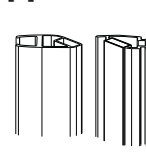


X1

[7]



X1

[8]




X1

[9]



X1

[10]



X1

X1

ST3.5X9.5  
X4

[11]




X1

[12]




X1

[13]



X1

[14]



X6


[15]



ST3.5X32


X14

[16]



X6


[17]



ST3.5X6.5

X14


[18]



500mm





X1

[19]









65mm

X1



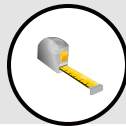
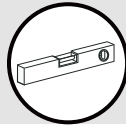
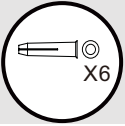
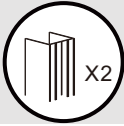




1

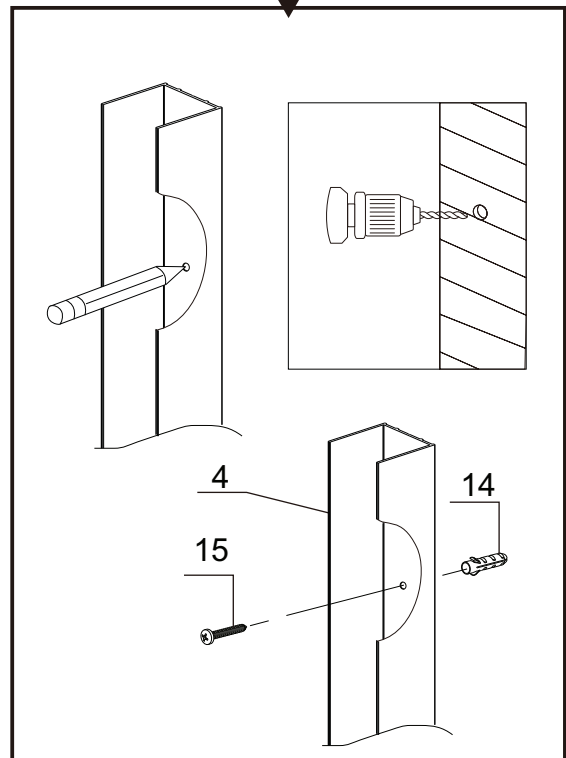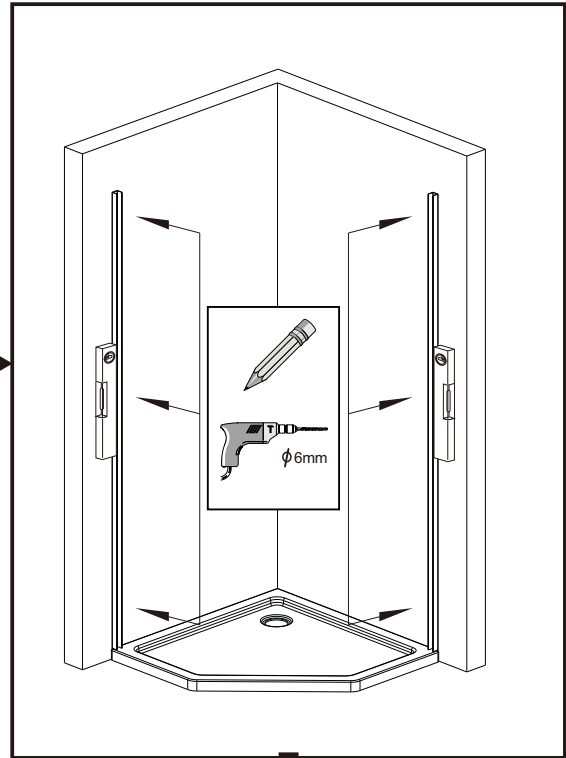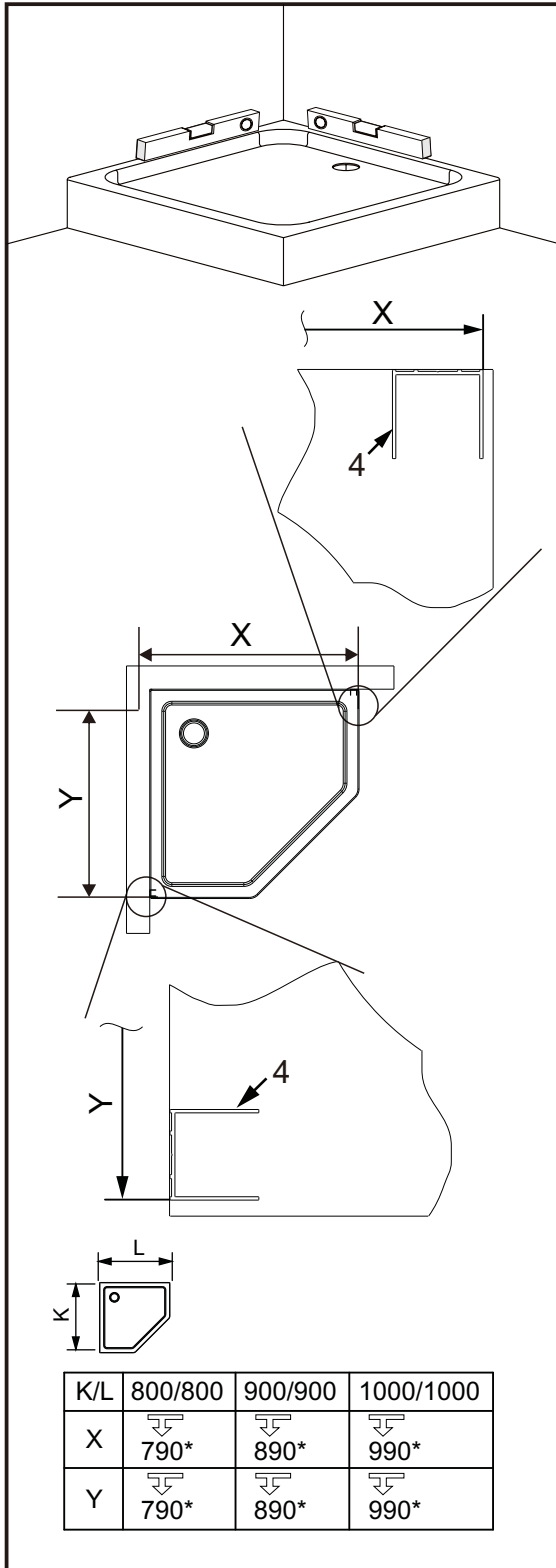



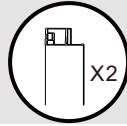
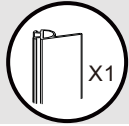
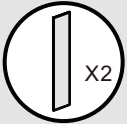





2

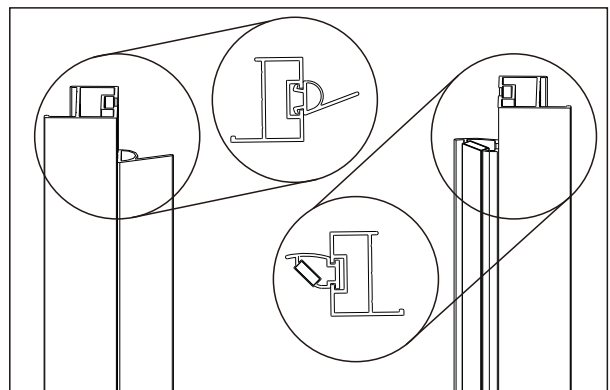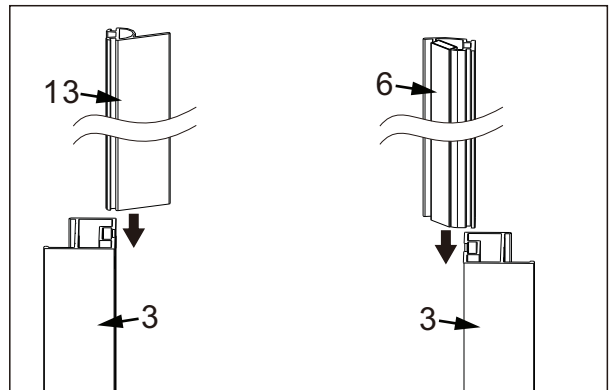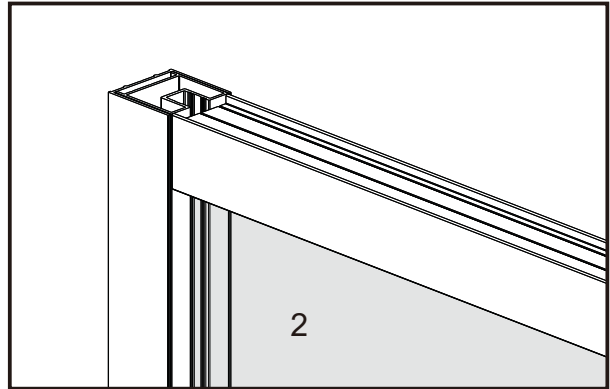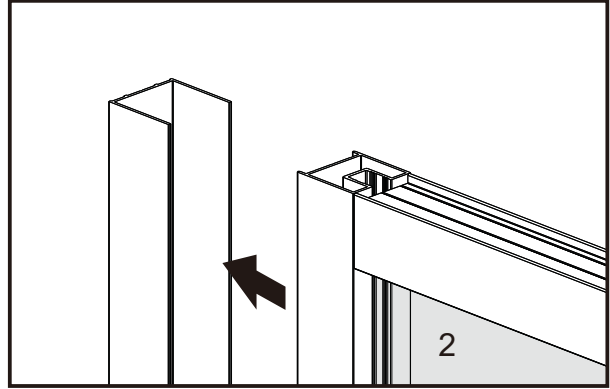
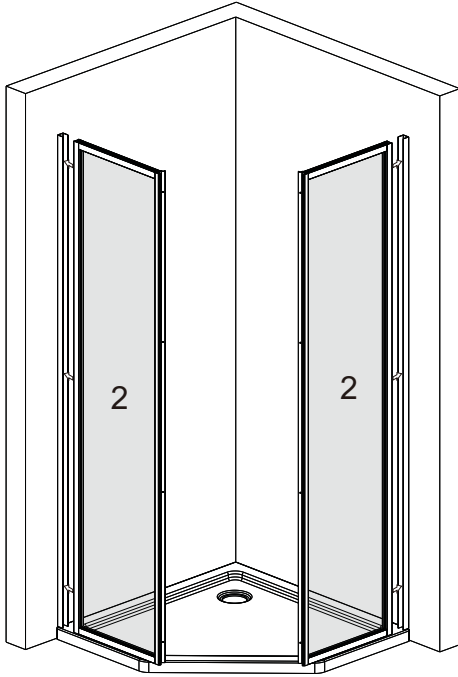


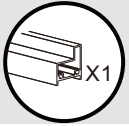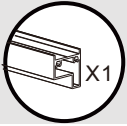


3

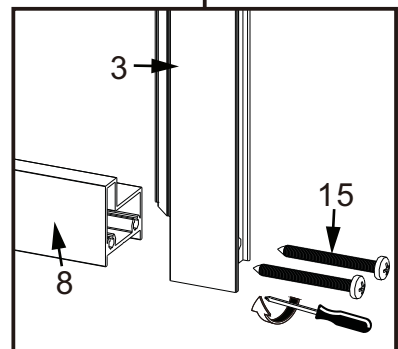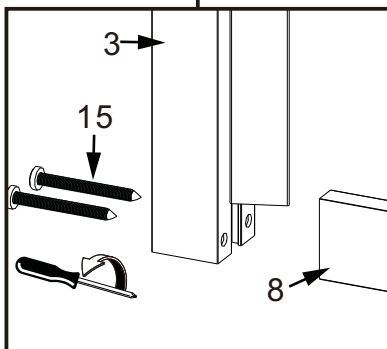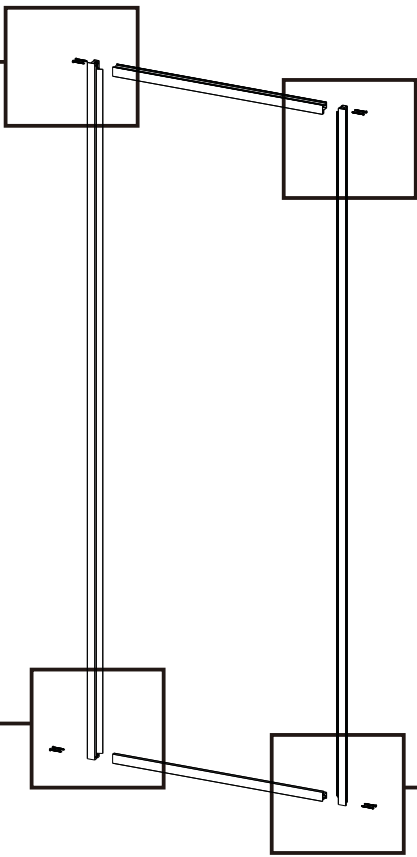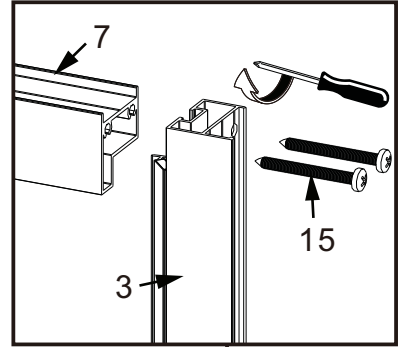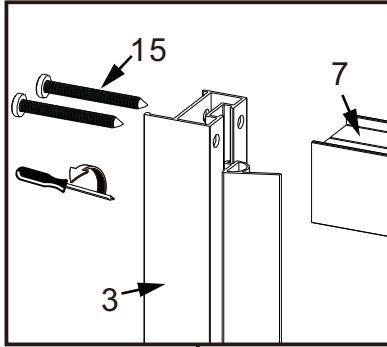


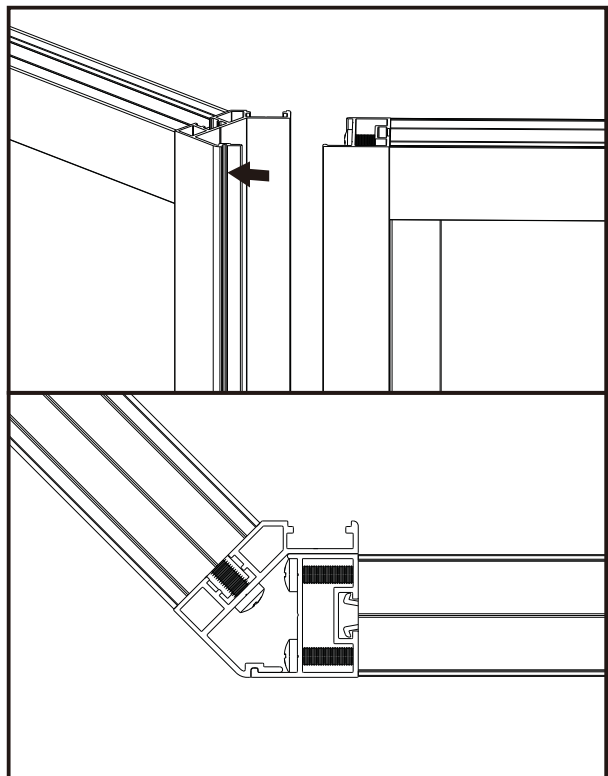
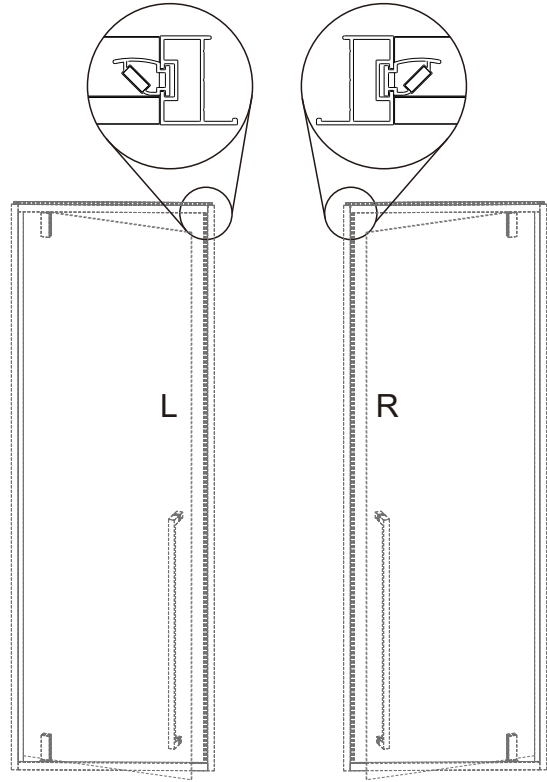
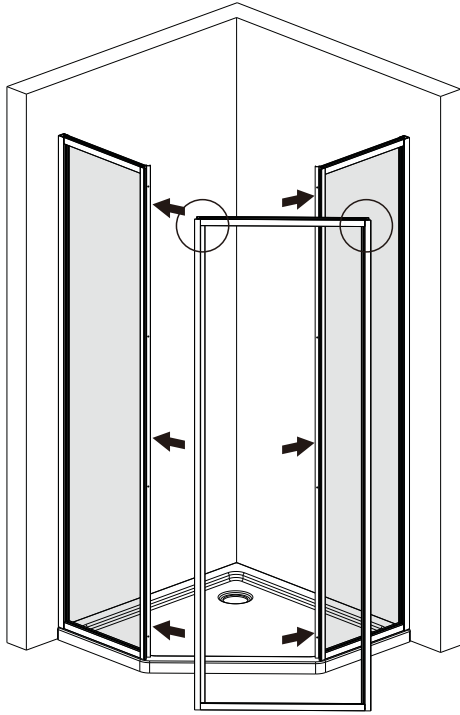


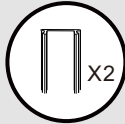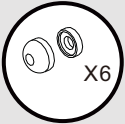


5

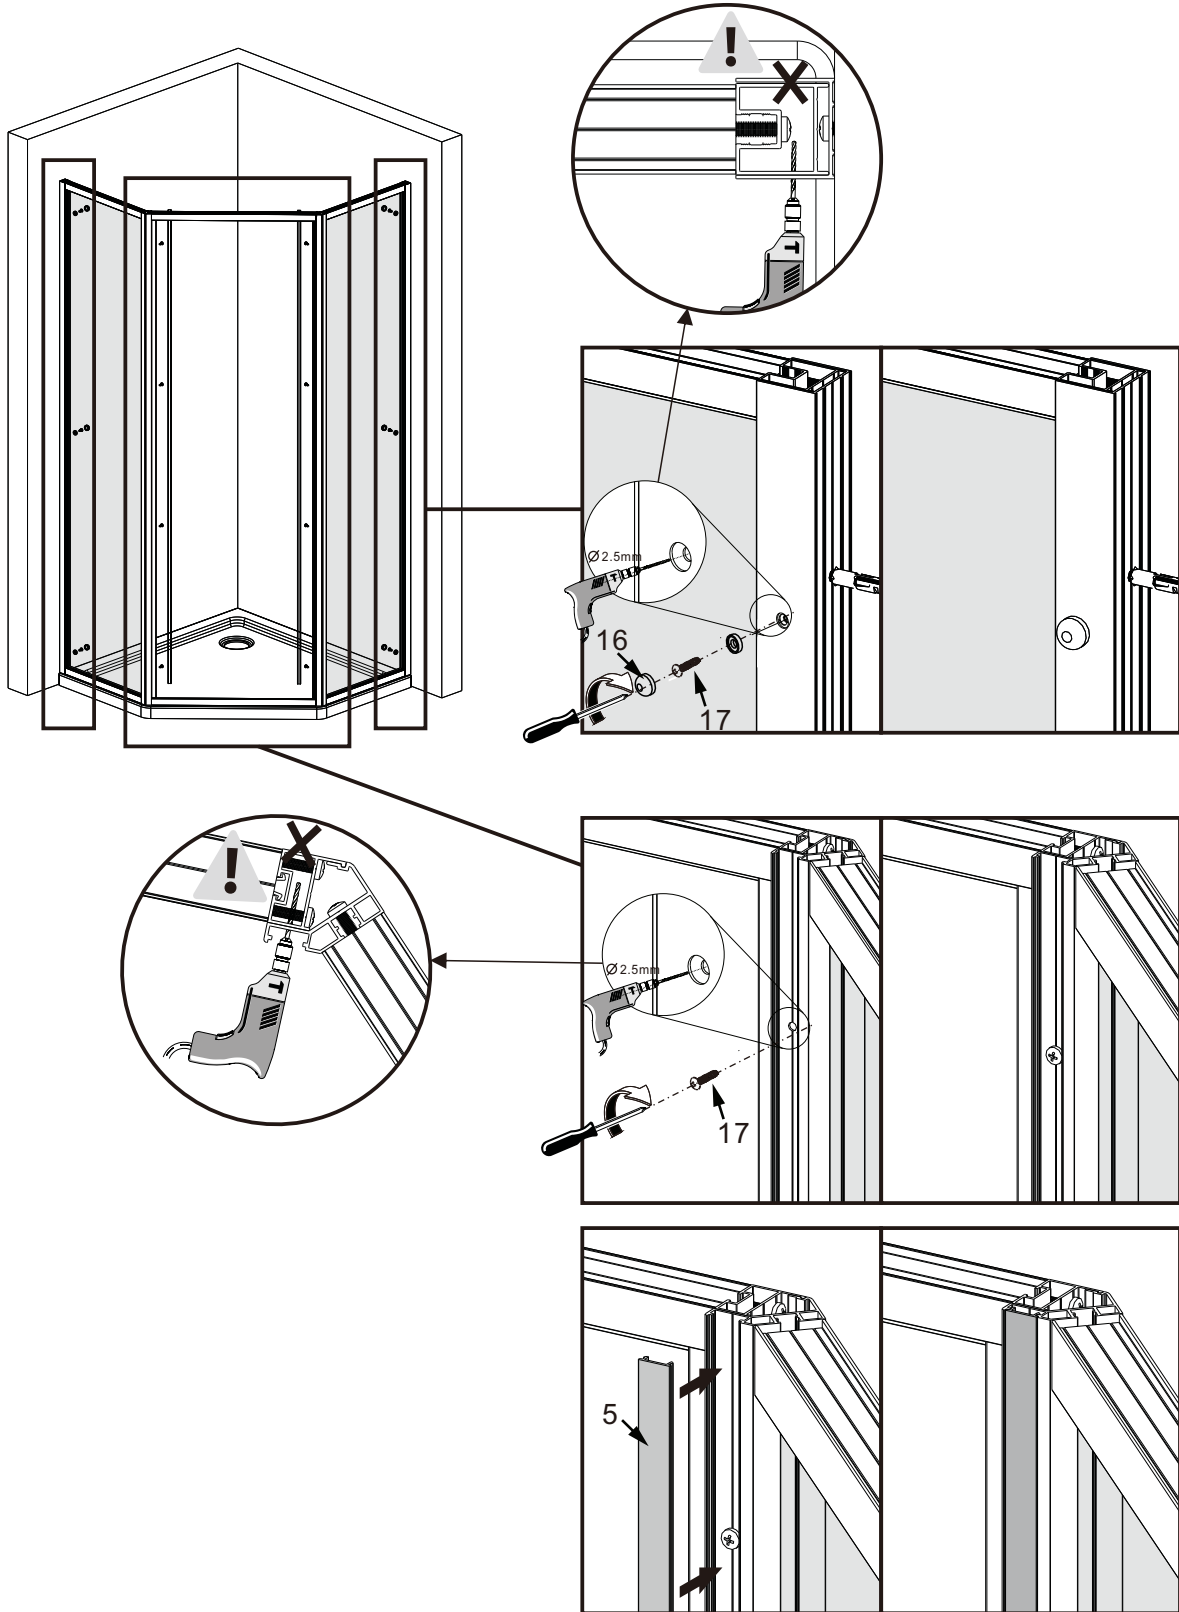





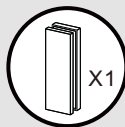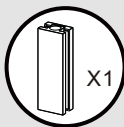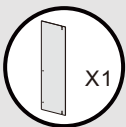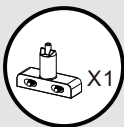


6

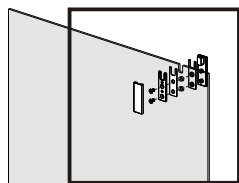



1

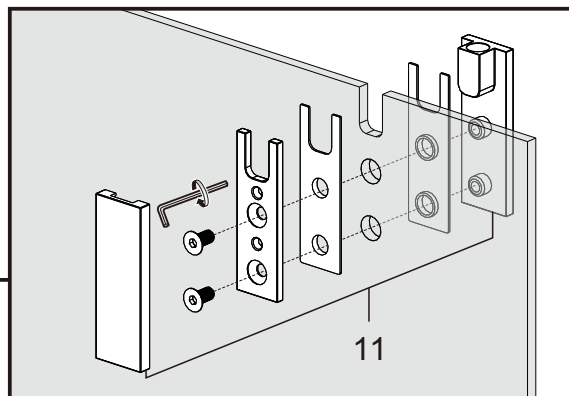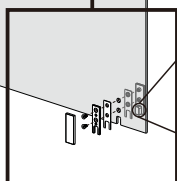


11

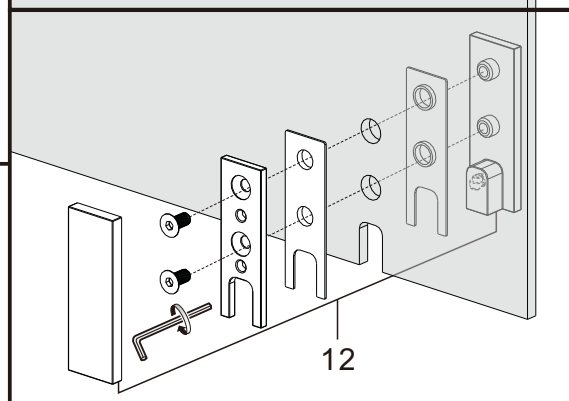





12


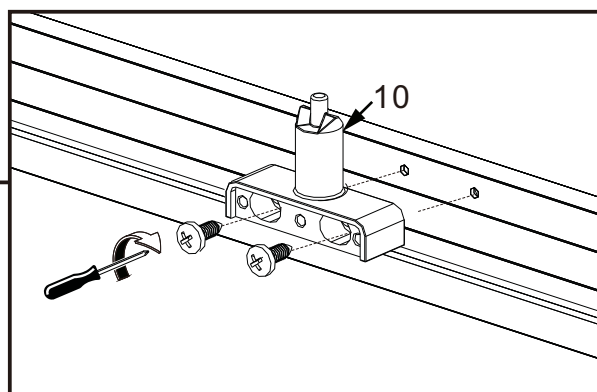
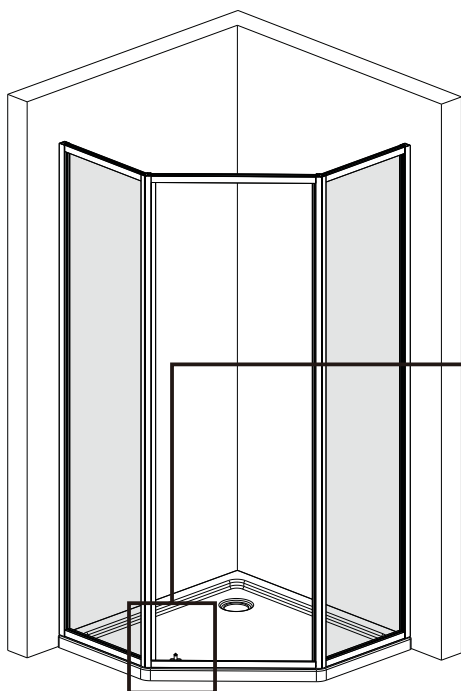


10




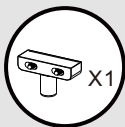



7

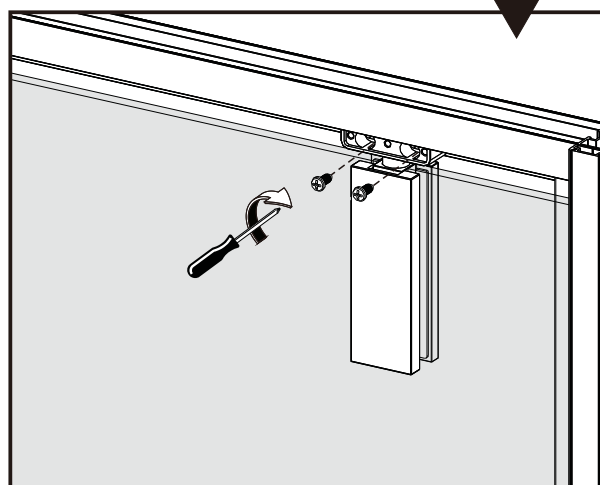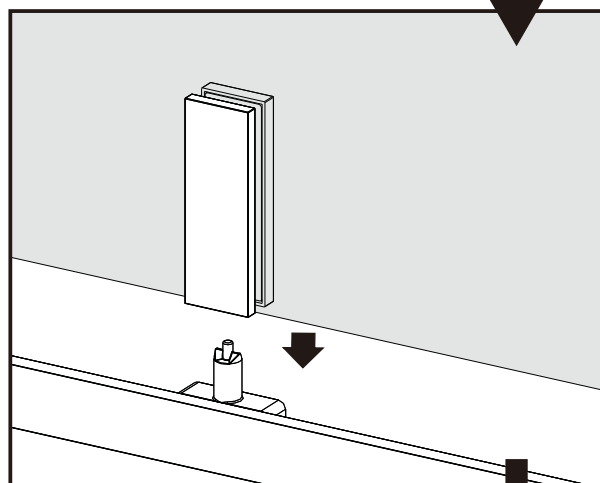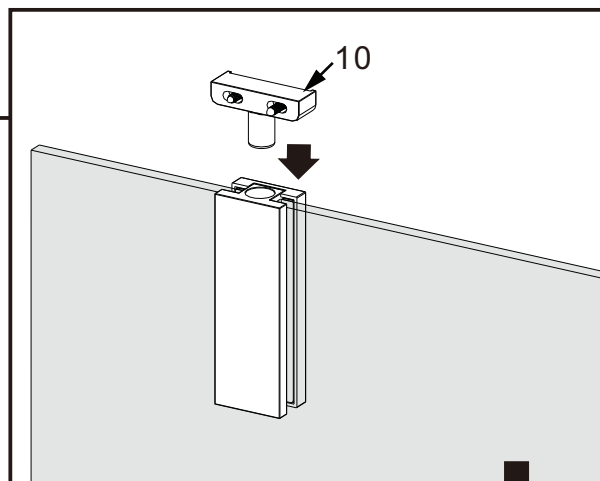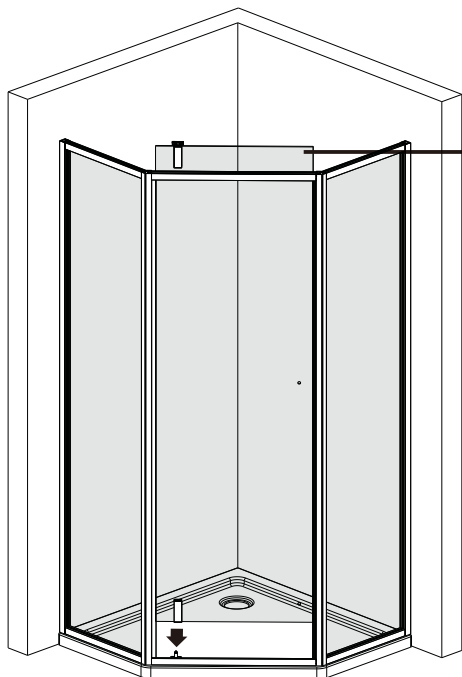




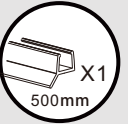
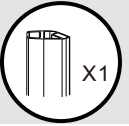
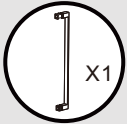


8

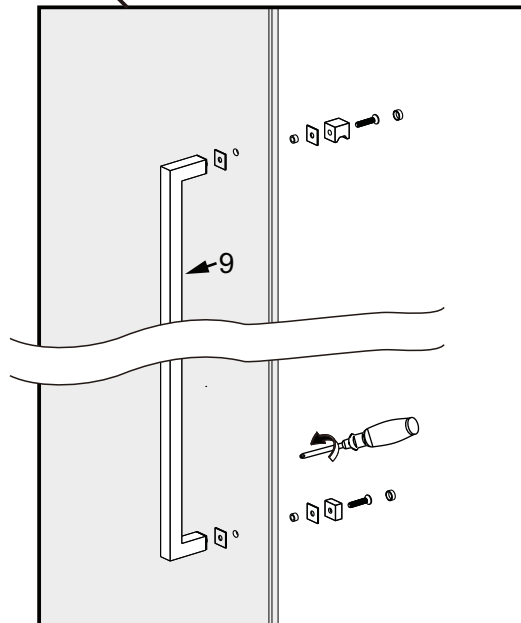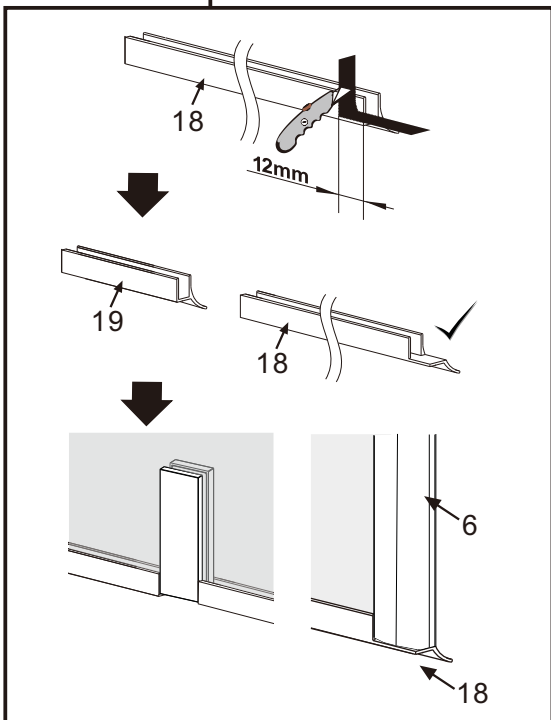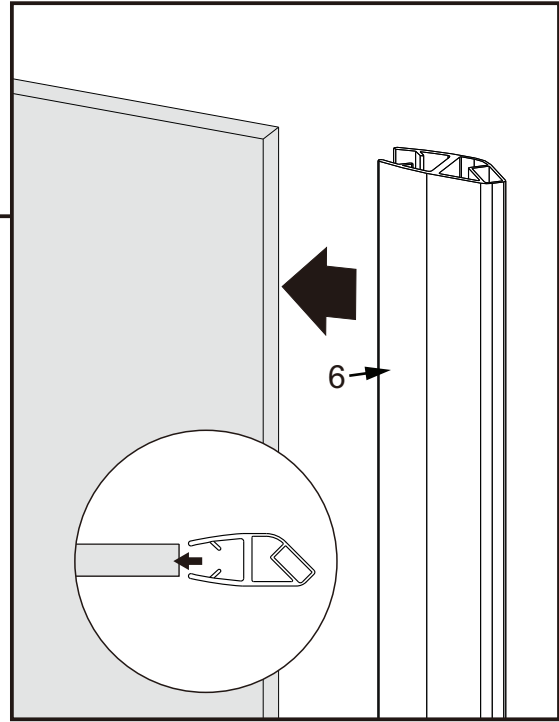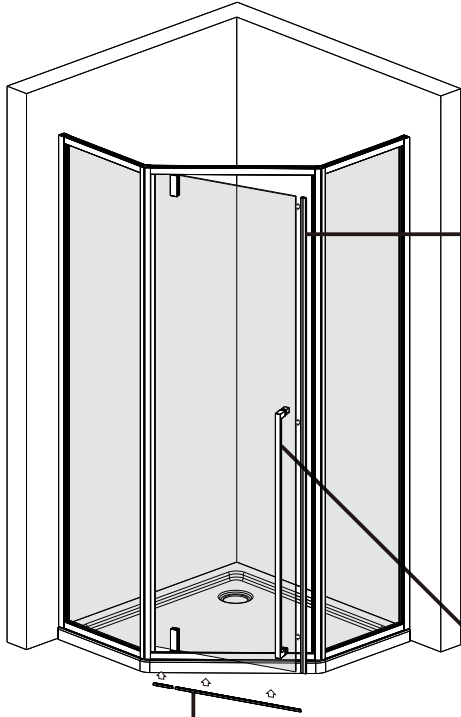

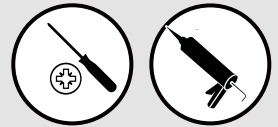

9

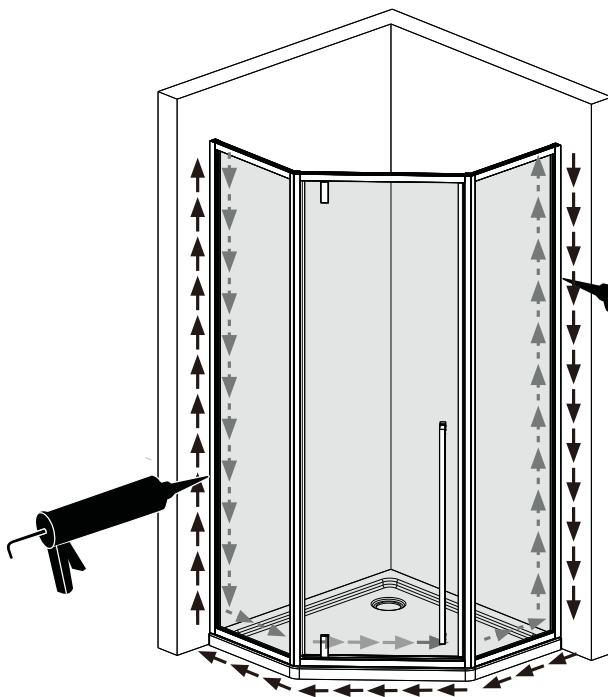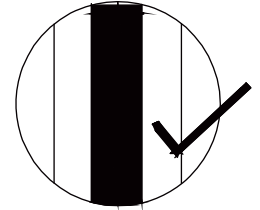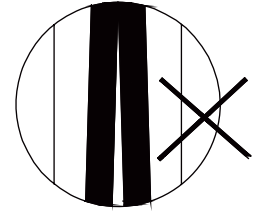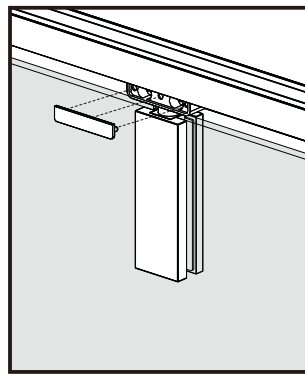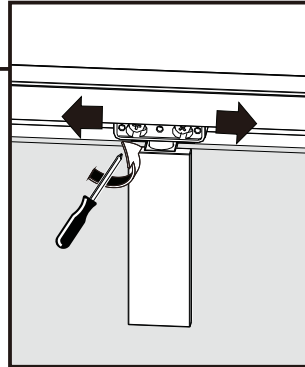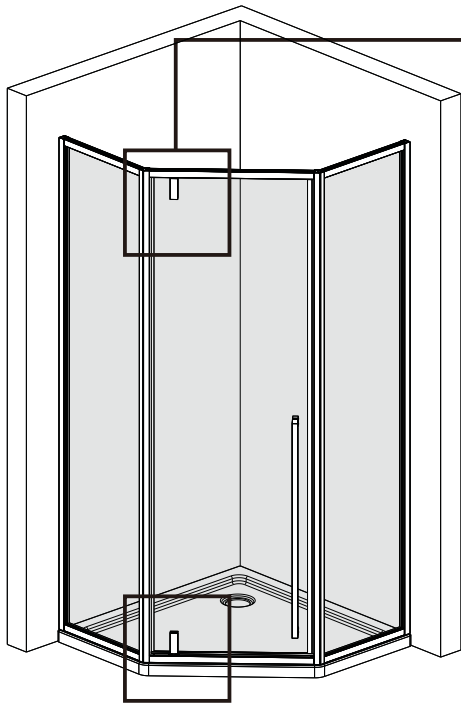

**RU** Не используйте душевое ограждение по крайней мере 24 часа, чтобы дать полностью застыть силиконовому герметику